


- ※ **High speed response time: 0.2 ms**
高速應答: 0.2 ms
- ※ **AUTOTUNNING of SENSITIVITY & EMITTING STRENGTH**
Easy to finish the OPTIMUM SETTING condition.
感度 & 發射強度自動設定: 容易完成最佳設定狀態
- ※ **OUTPUT OFF DELAY : 0.1s (optional)**
輸出復歸延遲: 0.1s (選用)
- ※ **DARK ON / LIGHT ON CHANGEABLE**
遮光動作 / 入光動作 可切換
- ※ **NPN & PNP TWO OUTPUT**
NPN & PNP 雙輸出

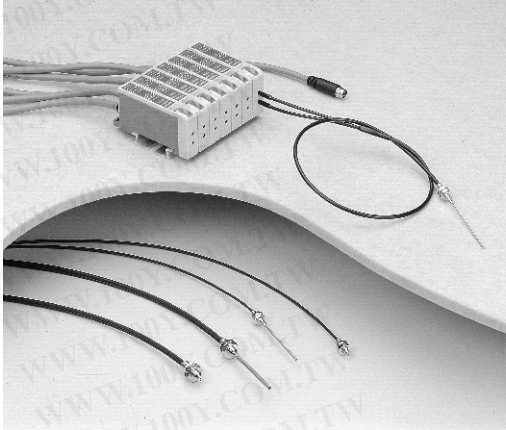


勝特力材料 886-3-5753170
 勝特力电子(上海) 86-21-34970699
 勝特力电子(深圳) 86-755-83298787
[Http://www.100y.com.tw](http://www.100y.com.tw)


SPECIFICATION 規格

TYPE 型式	LEAD WIRE 出線式		LEAD WIRE CONNECTOR 出線頭接式		
	Model 型號	mF-06R	mF-06RT	mF-06R-M8	mF-06RT-M8
Output OFF delay 輸出延遲		Non	0.1s	Non	0.1s
Response time 應答時間		0.2ms			
Emitter 發射光源		High efficiency Red LED			
Operating voltage 工作電壓		10-30 VDC; Ripple < 20% of peak to peak			
Current consumption 耗電流		45 mA max.			
Output method 輸出方式		NPN & PNP two output			
Output status 輸出狀態		NO / NC changeable			
Output current 輸出電流		150 mA max.			
Leakage current 漏電流		0.8 mA max.			
Residual voltage 殘留電壓		0.8 V max.			
Protection circuit 保護電路		SHORT CIRCUIT & POLARITY REVERSED PROTECTION			
Connection method 接線方式		4 C/5.0Ø X 2m		M8 Lead wire connector	
Housing material 外殼材質		Intensive ABS			
Protection class 保護等級		IP-65			
Circumstance 工作環境		-20 °C ~ + 60 °C ; 35 ~ 85 % RH			

Output Circuit / 輸出迴路

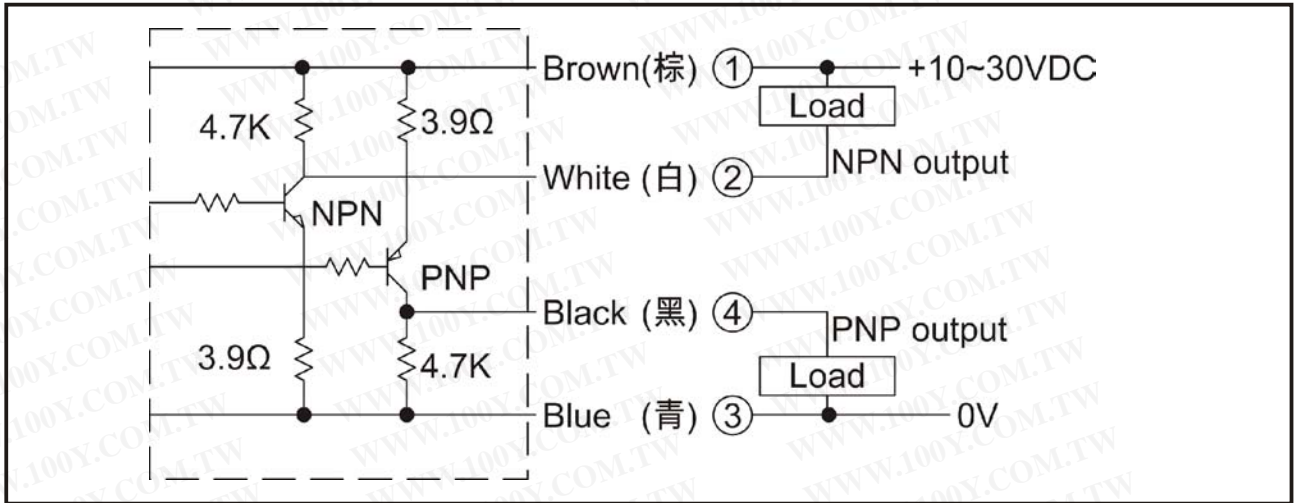


Dimension / 尺寸圖

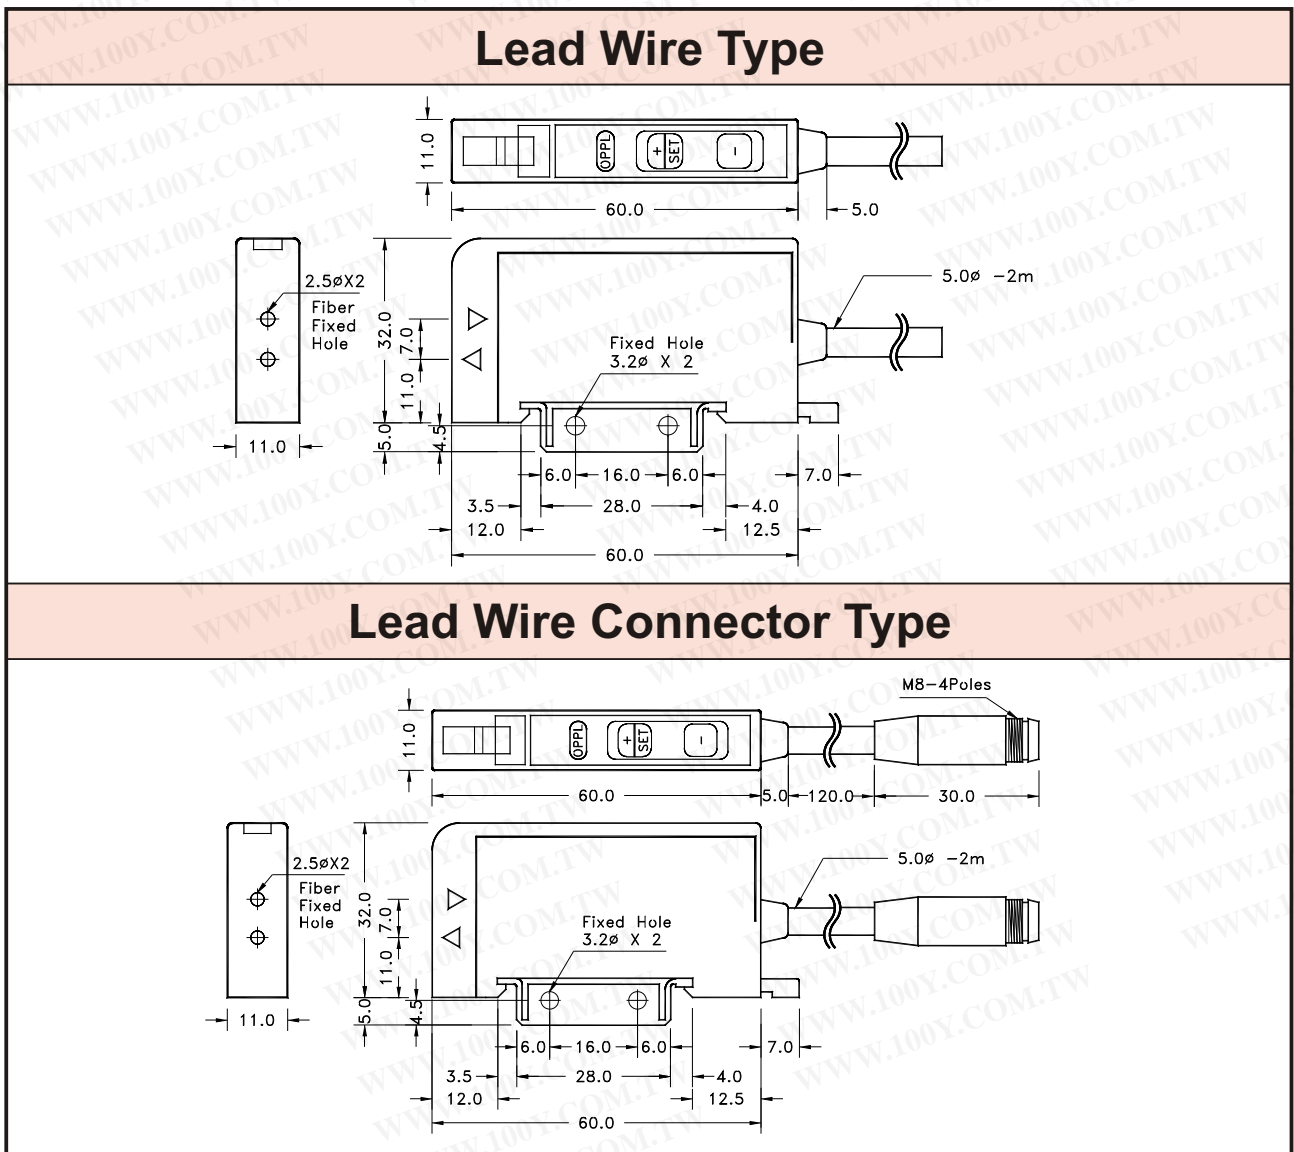


SETTING OF SENSITIVITY 感度設定

REFLEX TYPE 直接反射型

SETTING OF POSITION/定位設定


Please keep on pressing the  key with the detected object
Until the LED "PL" flicks slowly.

Then press the  key again to finish the SETTING OF POSITION.

(LED "PL" & "OP" will be turned ON)

有被檢測物時，請按住  鍵直到 "PL" LED 慢閃，然後再按

 鍵，即可完成設定。["PL" & "OP" LED 都會亮起來]

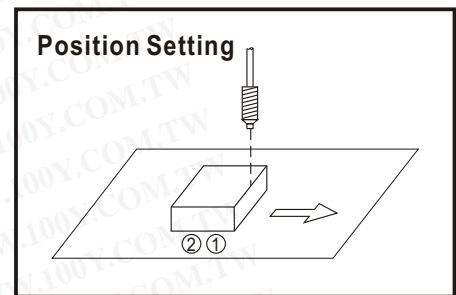

SETTING OF HIGH SENSITIVITY/高感度設定


Please keep on pressing the  key without the detected object
Until the LED "PL" flicks slowly,

Then press the  key again to finish the setting.

(LED "PL" will be turned ON, LED "OP" will be turned OFF)

無被檢測物時，請按住  鍵直到 "PL" LED 慢閃，然後再按

 鍵，即可完成設定。["PL" LED 會亮起來，"OP" LED 會熄掉]

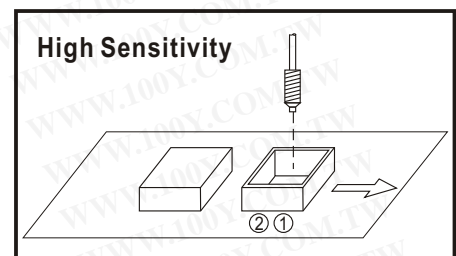

SETTING OF MID SENSITIVITY/中感度設定


Please keep on pressing the  key without the detected object
Until the LED "PL" flicks slowly,

Then press the  key again with the detected object

To finish the setting. (LED "PL" & "OP" will be turned ON)

無被檢測物時，請按住  鍵直到 "PL" LED 慢閃，然後有檢測物

時，再按  鍵，即可完成設定。["PL" & "OP" LED 都會亮起來]

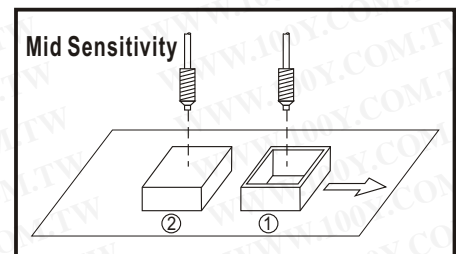

SETTING OF LOW SENSITIVITY/低感度設定


Please keep on pressing the  key with the detected object
Until the LED "PL" flicks slowly.

Then press the  key again with the detected object

To finish the setting. (LED "PL" & "OP" will be turned ON)

有被檢測物時，請按住 "SET" 鍵直到 "PL" LED 慢閃，然後再按

 鍵，即可完成設定。["PL" & "OP" LED 都會亮起來]

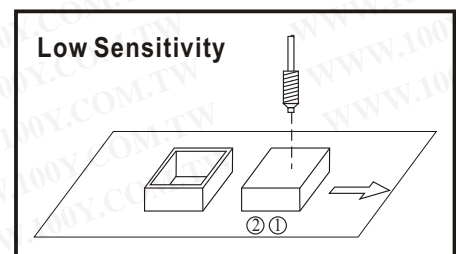


THRU BEAM TYPE 透過型

SETTING OF HIGH SENSITIVITY/高感度設定

Please keep on press the  key without the detected object


Until the LED "PL" flicks slowly,

Then press the  key again to finish the setting.

(LED "PL" & "OP" will be turned ON)

無被檢測物時，請按住  鍵直到 "PL" LED 慢閃，然後再按

 鍵，即可完成設定。["PL" & "OP" LED 都會亮起來]

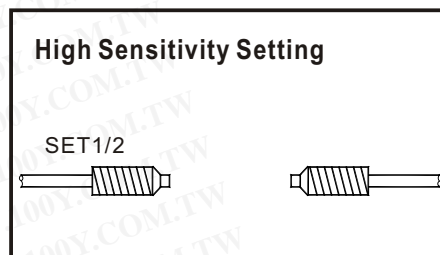


SETTING OF MID SENSITIVITY/中感度設定

Please keep on press the  key with the detected object


Until the LED "PL" flicks slowly,

Then press the  key again without the detected object

 To finish the setting. (LED "PL" & "OP" will be turned ON)

有被檢測物時，請按住  鍵直到 "PL" LED 慢閃，移開被檢測物後

再按  鍵，即可完成設定。["PL" & "OP" LED 都會亮起來]

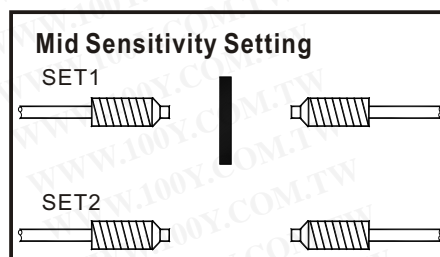

SETTING OF LOW SENSITIVITY/低感度設定

Please keep on press the  key with the detected object

Until the LED "PL" flicks slowly,


Then press the  key again with the detected object

To finish the setting.

(LED "PL" will be turned ON, LED "OP" will be turned OFF)

有被檢測，物時請按住  鍵直到 "PL" LED 慢閃，然後再按

 鍵，即可完成設定。["PL" LED 會亮起來，"OP" LED 會熄掉]

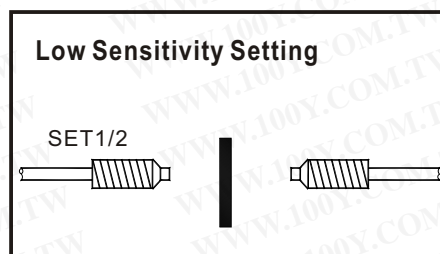

REMARKS/備註

1> IF LED "PL" flicks fast after finishing setting, It is the maximal sensitivity condition.

如果完成設定 "PL" LED 快閃，表示完成最大感度設定。


2> On the detecting condition if pressing the  key may add the sensitivity or

Press the  key may reduce the sensitivity.

在檢測狀態，按  鍵可增加感度/按  鍵可減弱感度。

3> To change the output status please keep on pressing the  key and pressing the  key

To change the output status.

(If keep on pressing the  over 3 sec will enter to the setting condition)

如果要改變輸出狀態，請按住  鍵然後再按  鍵即可改變輸出狀態。

(注意，不要按  超過3秒，否則會進入感度設定狀態)

4> On the detecting status. LED "PL" is the pilot of stability.

在檢測狀態，"PL" LED 是穩定指示燈。

勝特力材料 886-3-5753170
 勝特力电子(上海) 86-21-34970699
 勝特力电子(深圳) 86-755-83298787
[Http://www.100y.com.tw](http://www.100y.com.tw)